


[Free sample evaluation by SHOT-500]

Sample requirement

- Prepare 5 to 10 pcs/sample per each specification.
- Sample size should be 30x30mm t=1.2mm to 2.8mm.
- Sample structure should be as follow.

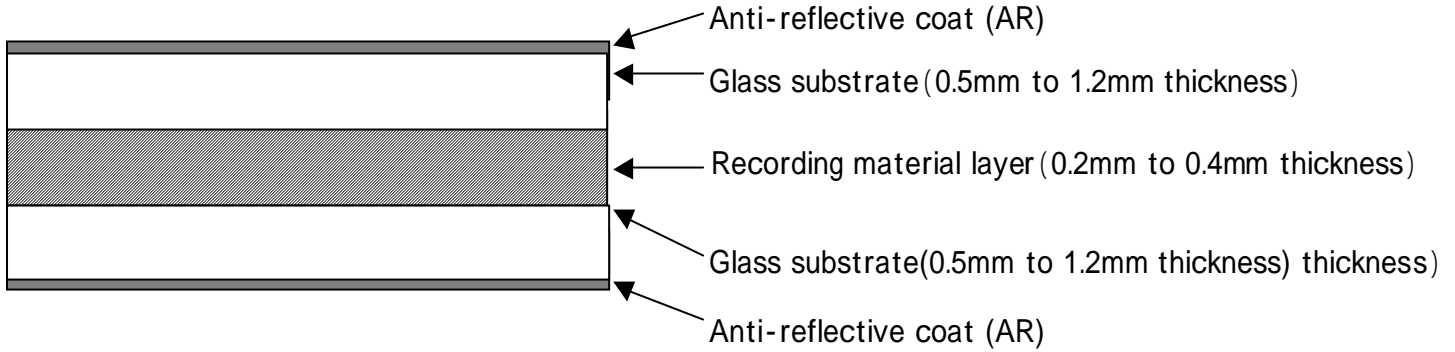

- Possible to introduce glass substrate manufacturer.

Flow chart of sample evaluation

Optimum exposure light evaluation

Set recording angle

Fix schedule energy of multiplex exposure recording

Multiplex recording

Fixing

Continuous playback

Is each diffraction efficiency equalized?

No

Calculate the scheduling automatically and define schedule energy of multiplex exposure light.

Change sample

Yes

Define M/#, Shrinkage

